

Not to scale

Bucknell Road →

Use hazard lights when parked in road.

Drive straight in to use depot pumps - A
Reverse to use vehicle pump - B

CCTV/Alarm control Pad and light


Tanker discharge area

Kerb
Store
Storage area

Loading gantry shed
Offices

Fuelmaster ullage/alarm control panel


Depot stripper pump start/stop switches

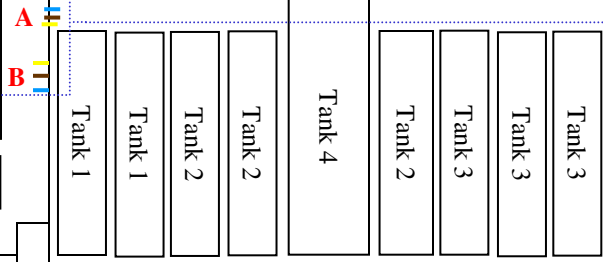

Tanks are interconnected to give these combined capacities

Tank No.	Product	Capacity (ltrs)
1	Derv	105, 011
1	Derv	
2	Gas Oil	157, 484
2	Gas Oil	
2	Gas Oil	
3	Kero	296, 947
3	Kero	
3	Kero	
3	Kero	
4	Kero	

Discharge header arrangement:

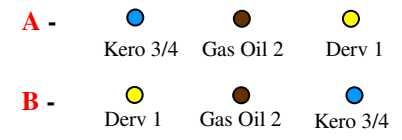

DRIVERS ARE ONLY PERMITTED TO BE WITHIN THE KERBED AREA OF THE YARD IN THE VICINITY OF THEIR VEHICLE, THE DISCHARGE HEADERS OR GATES WHILST ON SITE. ALL OTHER AREAS ARE OUT-OF-BOUNDS EXCEPT IN AN EMERGENCY.
EMERGENCY NUMBERS ARE:- 01869 342116 or 07860 427893

**NOLAN OILS
 MIDDLETON STONEY
 DEPOT BASE PLAN**
 (for absentee delivery purposes only)

Issue date: June 2005